




神牛微信公众号
Follow WeChat Public Account

Godox

fotichaestli.ch

MoveLink

 MoveLink 2.4GHz wireless
microphone system

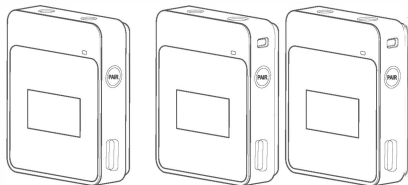

合格证
QC PASS

深圳市神牛摄影器材有限公司

地址: 深圳市宝安区福海街道塘尾社区福川工业区厂房2栋

电话: 0755-29609320(8062) 传真: 0755-25723423 邮箱: godox@godox.com

GODOX Photo Equipment Co., Ltd.

Add: Building 2, Yaochuan Industrial Zone, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen 518103, China Tel: +86-755-29609320(8062)

Fax: +86-755-25723423 E-mail: godox@godox.com

godox.com

Made in China



说明手册 | Instruction Manual

Forward

Thank you for purchasing Godox MoveLink 2.4GHz wireless microphone system. These products are suitable for video recording, journalistic shooting, audio recording, etc. Please read this manual carefully before using to make sure the correct operation and exert the optimum function.

Features

- 1 Adopt globally accepted 2.4GHz wireless and frequency-hopping technology to avoid same frequency disturbance, which can be used in WIFI and Bluetooth simultaneously (may be influenced in occasions with multiple WIFI nodes)
- 2 Clear, stable and lossless sound quality
- 3 The maximum wireless distance up to 50m
- 4 With TFT display to show the parameters setting
- 5 Support 3.5mm Earphone real-time monitoring
- 6 With output volume control and silence function
- 7 Stable match of transmitting and receiving
- 8 Supports two-way transmitting and one-way receiving
- 9 Freely switch mono or stereo channel to offer more output options
- 10 Two lithium battery charging methods through USB port or MoveLink charging case connected to power supply.

 
Warning

- ⚠ Do not disassemble. Should repairs become necessary, this product must be sent to an authorized maintenance center.
- ⚠ Always keep this product dry. Do not use in rain or in damp conditions.
- ⚠ Keep out of reach of children.
- ⚠ Do not use the device in the presence of flammable gas. In certain circumstance, please pay attention to the relevant warnings.
- ⚠ Do not leave or store the product if the ambient temperature reads over 40°C.
- ⚠ Turn off the devices immediately in the event of malfunction.

Names of Parts


MoveLink TX (Transmitter)

1. Built-in Microphone
2. 3.5mm Audio Port
3. Power Switch Button
4. Mute Button
5. Working Indicator
6. Pairing Button
7. TFT Display
8. USB Type-C Port

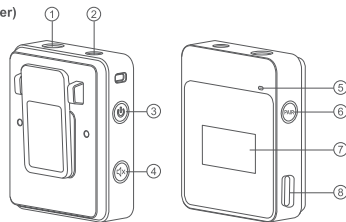

MoveLink RX (Receiver)

 1. 3.5mm Audio Sync Monitoring Port
2. 3.5mm TRS Audio Output Port
3. Power Switch/Switch Volume Setting Button
4. Sound +/-
5. Pairing Button
6. Working Indicator
7. TFT Display
8. USB Type-C Port

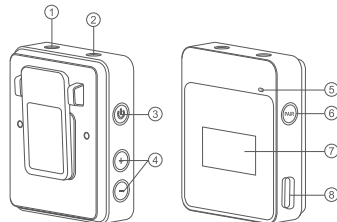

Functions and Operation

MoveLink TX (Transmitter)

1. Display


Icon 1: connecting channel. A means connecting to A channel.

Icon 2: connecting state. The icon on the picture means connected state.


Icon 3: battery level.

Icon 4: recording and silent icon. The icon on the picture means recording state.

 
Icon 5: soundbyte indication.

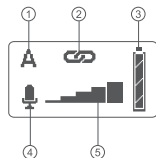

2. Function Introduction

 Power switch: long press the power switch to power on or off. In the state of power-on, if there is USB Type-C Cable inserted, long press the power switch to enter standby state and the charging animation will be displayed. In standby state, long press the power switch to power on.

 Short press the TX mute button to switch on or off silent mode.

 Long press the pairing button to match the receiver. The indicator will light blue when successfully matched.

 Charge the products through USB Type-C port directly. The charging animation will be displayed in charging.

 
3. Installation Method

Using built-in microphone:

Through the back clip


Install the transmitter on the collar through the back clip, aiming the built-in microphone towards the sound source direction.

For achieving better invisibility during the usage, it is recommended to fix the back clip towards the outside.

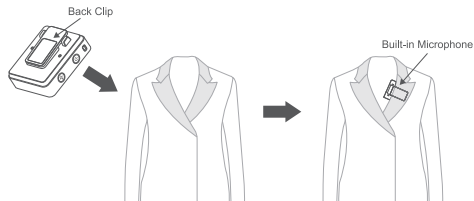


Through the magnetic mount

 Back clip of MoveLink transmitter and receiver with magnetic which can be mount on smooth metal iron surface. The including iron sheet can strongly absorb the back clip, allowing the transmitter or receiver to be hidden in the clothes. Hold the transmitter in one hand with the back clip facing out and put it into the clothes. With the other hand, cover the iron sheet on the clothes to absorb the back clip. After the back clip is strongly sucked, you can let them go. Note that single-layer clothes can be strongly adsorbed. Thicker, ultra-thick or multilayer clothes will have weak adsorption capacity and will not be able to adsorb. In this case, please do not use this installation method.

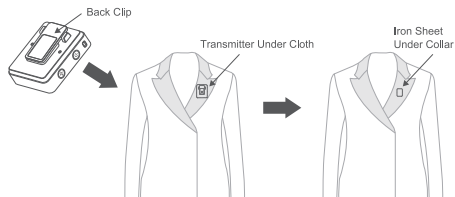

Using External Microphone:

 Insert the 3.5mm lavalier microphone into the transmitter's 3.5mm audio port and lock it tightly. Clip the transmitter onto the belt by back clip and clip the lavalier microphone on the other end onto the collar. When using the external microphone, the built-in microphone will be automatically turned off.

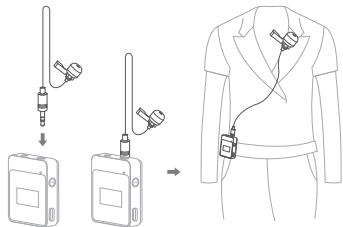

MoveLink RX (Receiver)

1. Screen Display

Icon 1: A channel transmitter's battery level

Icon 2: B channel transmitter's battery level

Icon 3: A/B channel's soundbyte dynamic display


Icon 4: Connection or disconnection of A/B channel

Icon 5: Sound channel selection display

Icon 6: A/B channel's volume adjustment display

Icon 7: Sound volume adjustment interface

 Icon 8: Pairing interface

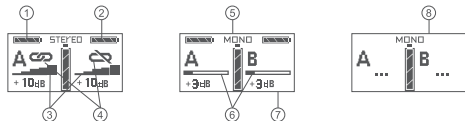

2. Function Introduction



A. Power Switch:

long press the power switch to power on or off. In the state of power-on, if there is USB Type-C inserted, long press the power switch to enter standby state and the charging animation will be displayed. In standby state, long press the power switch to power on.



B. Volume Adjustment:

(1) In dual sound setting mode, short press the "sound +/-" button to increase or decrease the A/B transmitter's sound volume simultaneously; long press the "sound +/-" button to increase or decrease the A/B transmitter's sound volume gradually.

(2) Switch Channel: Short press the power switch button (⏻) to separately adjust the volume of "A channel", "B channel" and "A&B dual channel". The channel with blinking figures can be adjusted volumes and will be switched to dual channel adjustment if there are no operations after 3 seconds.

(3) In mono channel mode setting, short press or long press the "volume +" (+) to increase the channel's volume gradually. If one of the transmitter's volumes is up to maximum, the current volume slider can only be displayed instead of being controlled; short press or long press the "volume -" (-) to decrease the channel's volume gradually. If one of the transmitter's volumes is up to minimum, the current volume slider can only be displayed instead of being controlled.

(4) There are 16 levels of volume adjustment: -5dB-10db.



 
C. Long press the pairing button to match the singles of transmitters. The left channel will automatically receive A transmitter's singles while the right channel will receive B transmitter's. Short press the pairing button to select mono channel and stereo channel.



D. Charge the products through USB Type-C port directly. The charging animation will be displayed in charging.


3. Installation Method

Install the receiver onto the camera's hotshoe and fix it through the back clip. And connect the receiver with the camera by 3.5mm TRS-TRS audio connect cable. Then, insert the your earphone plug into the 3.5mm Audio Sync Monitoring Port to monitor.

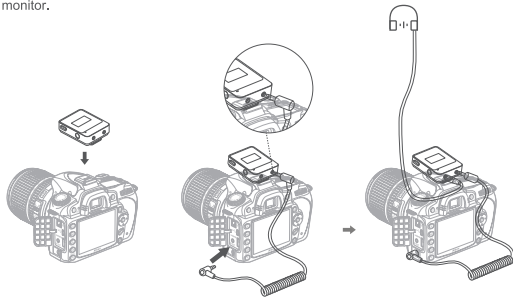

Port and Indicator

1. Ports:

Transmitter LINE IN: audio singles input 

Receiver LINE Out: audio singles output 

Receiver Audio Sync Monitoring Port: insert the earphone plug into  

2. Indicator:

Working indicator: the indicator will display green in normal working state.

(1) Transmitter

In standby state, the indicator will be off.

In boot-up state, the indicator will be orange in non-connection, be blue in connection.

During the pairing, the indicator will blink in red for two times circularly.

(2) Receiver

In standby state, the indicator will be off.

In boot-up state, the indicator will be orange in non-connection, be blue in connection.

During the pairing, the indicator will blink in red for two times circularly.

What's in the Box



MoveLink TX
(Transmitter)



MoveLink RX
(Receiver)



Wind Cap



Omnidirectional
Lavalier
Microphone



3.5mm TRS-TRS
Audio Connect Cable
(For Camera)



3.5mm TRS-TRS
Audio Connect Cable
(For Smartphone)



USB Type-C
Cable



MoveLink Charging Case



Wrist Strap



Iron Sheet



Instruction Manual
(Including Warranty)


Name	Model	Included Items
MoveLink Transmitter	MoveLink TX	MoveLink TX (Transmitter) ×1 Wind Cap ×1 USB Type-C Cable ×1 Iron Sheet ×1
MoveLink Receiver	MoveLink RX	MoveLink RX (Receiver) ×1 USB Type-C Cable ×1 Iron Sheet ×1
MoveLink M1	MoveLink M1	MoveLink TX (Transmitter) ×1 MoveLink RX (Receiver) ×1 Wind Cap ×1 1,2m Omnidirectional Lavalier Microphone ×1 3.5mmTRS-TRS Audio Connect Cable (for camera) ×1 3.5mmTRS-TRRS Audio Connect Cable (for phone) ×1 USB Type-C Cable ×2 Iron Sheet ×2
MoveLink M2	MoveLink M2	MoveLink TX (Transmitter) ×2 MoveLink RX (Receiver) ×1 Wind Cap ×2 1,2m Omnidirectional Lavalier Microphone ×2 3.5mmTRS-TRS Audio Connect Cable (for camera) ×1 3.5mmTRS-TRRS Audio Connect Cable (for phone) ×1 USB Type-C Cable ×3 MoveLink Charging Case ×1 Wrist Strap ×1 Iron Sheet ×3

Note: Packing lists of all models also include the instruction manual (with warranty).


Optional Accessory

1. MoveLink Charging Case ML-C3(Include USB Type-C Cable and a Wrist Strap)
There are three charging bases in MoveLink, which can charge three transmitters or receivers of MoveLink system after being connected to power supply.

 Note: MoveLink M1 do not include MoveLink Charging Case while MoveLink M2 includes a MoveLink Charging Case.

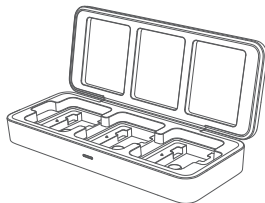

MoveLink Charging Case Schematic Diagram of Charging:
The indicator will display yellow during the charging process and turn to green when being fully charged.

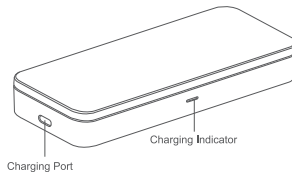 

MoveLink system has two charging ways:
A. being charged from USB Type-C cable;
B. being charged through MoveLink Charging Case.

Technique Data

Name	MoveLink RX (Receiver)	MoveLink TX (Transmitter)
Simulated Output	3.5mmTRS	
Sensitivity		-32dB/+2dB
Max. SPL		120dB
Simulated Input		3.5mmTRS Lavalier microphone input
Equivalent Input Noise Level	21.8dB (A weighting)	
Frequency Range	50Hz-20KHz	
Max. Output Electrical Level	+3dBu	
Single to Noise Ratio	70dB or higher	
Fixing Method	Back clip (installed onto camera's hotshoe)	
Display	TFT Display	
Dynamic Range	100dBA (microphone preamplifier)	
Working Range	50m (in no shelter situation)	
Power Supply	Built-in lithium battery	
Working Time	Approx. 6H	
Battery Capacity	300mAh	
Transmission Type	2.4GHz Frequency hopping system	
2.4G Wireless Frequency Range	2404MHz~2476MHz	
Max. Transmitting Power of 2.4G wireless	18dbm	
Sound Pick-up Mode	Omnidirectional	
Working Environment Temperature	-10~50°C	
Dimension	Length 50mm × width 40mm × thickness 14mm	
Weight	27g	

Name	MoveLink Charging Case ML-C3
Material	ABS Material
Suitable Models	MoveLink TX, MoveLink RX
Charging Input	USB Type-C
Dimension	Length 163mm × Width 66mm × Thickness 28mm
Weight	129g

Troubleshooting

Unable to receive audio signal. Make sure batteries are installed correctly and Power Switch is turned on. Check if the transmitter and the receiver are set to the same channel, if the microphone or earphone is well connected, or if the devices are set to the correct mode.

Check if the transmitter is set to mute mode or not.

Signal disturbance or shooting interference. Change a different channel of the transmitter and receiver.

Operation audio distance limited or signal missing. Check if batteries are exhausted. If so, replace them.

Maintenance

Avoid sudden drops. The device may fail to work after strong shocks, impacts, or excess stress.

Keep dry. The product isn't water-proof. Malfunction, rust, and corrosion may occur and go beyond repair if soaked in water or exposed to high humidity.

Avoid sudden temperature changes. Condensation happens if sudden temperature changes such as the circumstance when taking the product out of a building with higher temperature to outside in winter. Please put the product in a handbag or plastic bag beforehand.

Keep away from strong magnetic field. The strong static or magnetic field produced by devices such as radio transmitters leads to malfunction.

Changes made to the specifications or designs may not be reflected in this manual.

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

产品保修

尊敬的用户，本保修卡是申请保修服务的重要凭证，请您配合销售商填写并妥善保管，谢谢！

产品信息	型号	产品条码
用户信息	姓名	联系电话
	通信地址	
销售商信息	名称	
	联系电话	
	通信地址	
	销售日期	
备注		

注：此表应由销售商盖章确认。

产品信息

本文件适用于相关《产品保修信息》(见后面说明)所列产品，其他非属此范围的产品或部件(如促销品、赠品及其他出厂后附加的部件等)不在此保修承诺内。

保修期

产品及部件的相应保修期按相关的《产品保修信息》执行。保修期自产品首次购买日起算，购买日以购买产品时保修卡登记日期为准。

如何获得保修服务

要保修服务，您可直接与产品销售商或授权服务机构联系，也可拨打神牛产品售后服务电话，与我们联系，由我们的服务人员为您安排服务。申请保修时，您应提供有效的保修卡作为保修凭证，方可获得保修。如您不能提供有效的保修卡，则在我们可确认产品或部件属于保修范围的情况下，也可以为您提供保修，但这不作为我们的义务。

不适用保修的情况

如产品存在下列情况，本文件项下的保证和服务将不适用 ① 产品或部件超过相应保修期；② 错误或不当使用、维护或保管导致的故障或损坏，如：不当搬运；非按产品合理预期用途使用；不当插拔外接设备；跌落或外力挤压；接触或暴露于不适当温度、溶剂、酸碱、水浸或潮湿环境；③ 由非神牛授权机构或人员安装、修理、更改、添加或拆卸造成的故障或损坏；④ 产品或部件原有识别信息被修改变更或删除；⑤ 无有效保修卡；⑥ 使用非法授权、非标准或非公开发行的软件造成的故障或损坏；⑦ 因不可抗力或意外事件造成的故障或损坏；⑧ 其他非因产品本身质量问题导致的故障或损坏。遇上述情况，您应向相关责任方寻求解决，神牛对此不承担任何责任。因非在保修期或保修范围内的部件、附件或软件导致产品不能正常使用的，不是保修范围内的故障。产品使用过程中正常的脱色、磨损和消耗，不是保修范围内的故障。

产品保修和服务支持信息

产品的保修期和服务类型按以下《产品保修信息》执行：

产品类别	选件名称	保修期(月)	保修服务类型
部件	电路板	12	客户送修
	电池	3	客户送修
	充电器、电源线，同步线等带电性能的部件	12	客户送修
其他	如电池盒、防风棉、防风毛罩、锁紧装置、手提绳、扎带、魔术贴、领夹、便携袋、包装等	无	无保修

神牛产品售后服务电话 0755-29609320-8062

Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safe-keep it. Thank you!

Product Information	Model	Product Code Number
Customer Information	Name	Contact Number
	Address	
Seller Information	Name	
	Contact Number	
	Address	
	Date of Sale	
Note		

Note: This form shall be sealed by the seller.

Applicable Products

The document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g. promotional items, giveaways and additional accessories attached, etc.) are not included in this warranty scope.

Warranty Period

The warranty period of products and accessories is implemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day (purchase date) when the product is bought for the first time, and the purchase date is considered as the date registered on the warranty card when buying the product.

How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is

involved in the maintenance scope, but that shall not be considered as our obligation.

Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases: ①. The product or accessory has expired its warranty period; ②. Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc; ③. Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment; ④. The original identifying information of product or accessory is modified, alternated, or removed; ⑤. No valid warranty card; ⑥. Breakage or damage caused by using illegally authorized, nonstandard or non-public released software; ⑦. Breakage or damage caused by force majeure or accident; ⑧. Breakage or damage that could not be attributed to the product itself. Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.

Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following **Product Maintenance Information**:

Product Type	Name	Maintenance Period(month)	Warranty Service Type
Parts	Product Main Body	12	Customer sends the product to designated site
	Battery	3	Customer sends the product to designated site
	Charger, Power Cable, Sync Cable, Electrical Parts etc.	12	Customer sends the product to designated site
Other Items	Battery Case, Windscreen Foam, Wind Cap, Locking Device, Lanyard, Tie, Velcro Tape, Clip, Bag, Package etc.	No	Without warranty