


1. Set Up / Collapse a Softbox Hold the handle with one hand and pull it back until it clicks as shown in the picture.

• Collapse: Slide the UNLOCK button to the left to collapse it.



2. Adapter Mounting and Disconnecting Mount the Sadapter: Put the Sadapter into the S-Adapter's hole and press the lock button downwards firmly to hold the speedlite so that it doesn't detach.

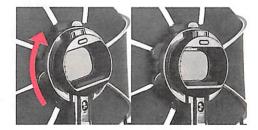

* Mount the adapter to the speedring. Mount: Insert adapter into speedring aligning the mark and turn it to the right until it clicks.



* Angle Control


Press the button on the angle grip with your hand changing it to the desired angle and release button to hold.

Forcing angle changes without pressing the angle grip can cause wear to the angle change joint.



 Detach the S adapter: Press the UNLOCK button to remove it.

A1, V1 adapter Mount: If the head of the speedlite is placed close to the adapter, it is held by magnetism.

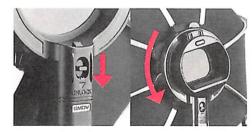

 Detach: After lowering the UNLOCK button on the hand grip, turn the adapter to the left to easily separate from the speedirng.



* Mounting on Stand

Insert the "SM swivel" into the spigot of the stand and rotate to the right it with appropriate force. To separate it from the stand, rotate it to the left.





* Using Accessories

You can use accessories such as colorfilters. diffusers, honeycomb grids, and gel frame on the adapter. (Held by magnets)

 


Contents * If you purchase the following components, make sure to check them out.

★ Basic contents: Speedbox-Flip Speedring, Adapter (choose S, A1 or V1), Exclusive Bag



Softbox Fabric + Speedring



Exclusive Bag



S adapter

Includes mini-light adapter



A1 adapter



V1 adapter

★ Accessories (Separate Purchase)



Red



Orange



Sandy

Brown





Yellow



Green





Purple



Diffuser





Honeycomb Gel Frame

