


Geared Head GH-PRO II User Manual

- 1. Panning Base with Clamp
- 2. Quick Release Clamp Screw-knob
- 3. Bubble Level
- 4. Top Panning Lock-knob
- 5. Lateral Rotator
- Fore-Aft Rotator
- 7. Lateral Tilt Adjustment Knob
- 8. Fore-Aft Tilt Adjustment Knot
- 9. Lateral Till Quick-adjust Crank-handle
- 10.Fore-Aft Tilt Quick-adjust Crank-handle
- 11.Head Panning Base 12Head Panning Base

Lock-knob

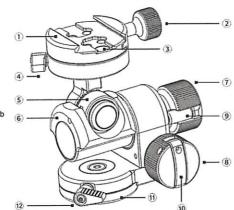

Clamp Type: DDH-11 Panning Base with Clamp

Dimensions: 140 * 84 * 124mm

Lateral Tilt Angle: ±40°

Net Weight: 847g Load Capacity: 4kg

Fore-Aft Tilt Angle: ±90°

Operation Instructions

Lateral or Fore-Aft Tilt Adjustment Knob

1.Lateral Tilt Adjustment

Rotate the Lateral Tilt Adjustment-knob to fine tune the tilt angle of the Lateral Rotator.





2.Fore-Aft Tilt Adjustment

Rotate the Fore-Aft Tilt Adjustment-knob to fine tune the tilt angle of the Fore-Aft Rotator.





Quick-adjust Crank-handle

3.Lateral Tilt Quick-adjustment

Pull out the Lateral Tilt Quick-adjust Crank-handle to adjust the head angle easily laterally.

Pull out the crank-handle until it's secured for easier adjustment.









4.Fore-Aft Tilt Quick-adjustment

Pull out the Fore-Aft Tilt Quick-adjust Crank-handle to adjust the head angle easily back to forth.





Quick-release Plate Installation

Position the camera screw of the quick-release plate DP-60G at the thread socket on the camera, and tighten the screw by the wrench. see fig. 1 Loosen the Quick-release Clamp Screw-knob, insert the quick-release plate and tighten the clamp to lock the plate, see fig. 2





Mounting on a Tripod

The base 3/8" thread socket of the head can be mounted on corresponding screw thread directly, see fig. 3

Always tighten the Head Panning Base Lock-knob before mounting it on a tripod, see fig. 4





Fig 4

Clamp and Panning Base Lateral Adjustment

Loosen the Top Panning Lock-knob, the clamp can rotate in 360 degrees horizontally, when it's tightened, the clamp is fixed horizontally, see fig. 5 The panning clamp is rotating ,when the Top-Panning Lock-knob is blocked by the Quick Release Clamp Screw-knob, pull out or pull in the Top-Panning Lock-knob to adjust the Panning knob direction

Loosen the Head Panning Base Lock-knob, the head can rotate in 360 degrees horizontally and when it's tighten, the head is fixed horizontally, see fig. 6

Pull the Head Panning Base Lock-knob to adjust the angle of the knob to avoid interference with other knobs, see fig. 7



Fig 5





Notice

- Working Temperature: -40°C to 60°C.
- Please loosen all the knobs and store the head if it will not be used for a long
- Make sure the camera is removed from the head or secure by hands before moving the tripod or head for safety's sake.
- Do not use this product as other tool than its original purpose of design.
- This is exquisite equipment which requires careful handling, please avoid impacts, drops so as not to cause wobble etc. issues.
- This equipment is not waterproof, please do not use it under water especially sea water. Please wipe it dry if it's rained.
- Diagrams of this user manual are for better display of the instructions, please refer to the real object for product details.

Warranty

Sunwayfoto provides a 6-year limited warranty service for this product. Please visit our website for more warranty details, www.sunwayfoto.com

Package

Geared Head GH-PRO II*1, Quick-release Plate DP-60G*1, Protective Bag*1, Cleaning Cloth*1, Camera Mounting Screw*1, 1/4" Adapter Bushing*1, 4mm Wrench*1, Safety Stop Screws*2, 2.5mm Wrench*1, User Manual

LIMITED WARRANTY CONDITIONS

- 6-year repair service for all our products upon receipt and under normal use.
- This warranty card becomes effective immediately upon receipt and users will include this card when sending your product to designated service center.

ZHONGSHAN SUNWAYFOTO PHOTOGRAPHIC EQUIPMENT CO., LTD

Email: sales@sunwayfoto.com Homepage: www.sunwayfoto.com Tel: +86 0760 8638 0085 Enterprise Product Standard: Q/SWSY 002-2018 Address: No. 201, 202 Building C, No.8 Jintai Road, Pingnan Village, Sanxiang Town, Zhongshan City, Guangdong Province, China.





w.sunwayfoto.com

And the second s		নে । প্ৰসূত্তি কৰিছিল এই বিশ্বস্থানে কৰিছিল। তেওঁ কৰিছিল কৰিছিল কুমুল কৰিছিল কৈ এই এই এই এই এই তেওঁ স্থাপনিত্ৰী কৰিছিল। তেওঁ কৰিছিল এই এই এই এই এই এই এই এই এই এই এ	
en fan de fan fan de fan de fan de fan de fan de fan de fan d De fan de fa De fan de fa	1975年 自由公司、公司公司、公司公司、公司公司、公司公司、公司公司、公司公司、公司公司、	Service Annual Control (1997)	
the second s			